

Maintenance recommendations after use (every time)

Wear full protective gear during maintenance !

Always act according to the safety instructions as supplied with each tool !

- For all thermoplastic dual hoses
- Necessary equipment: soft cloth

Replace the hose if one of the following items is wrong !



Step 1

- Check general condition hoses.
- Check hoses for traces of oil leakage.
- Clean the hoses with water and soap when they have been in contact with aggressive fluids.



Step 2

- Check couplers and dust caps for dirt and/or oil leakage.
- Clean autolock couplers with a clean and soft cloth, if necessary with water and soap.
- If necessary grease with hydraulic oil or use WD-40.
- Check functioning couplers (see fig. 1, page 3).
- Reconnect loose dust caps to couplers.




Step 3

- Replace hose, when obvious traces of kinks are visible.




Step 4

- Replace hose, when the steel wire inlayer is visible.

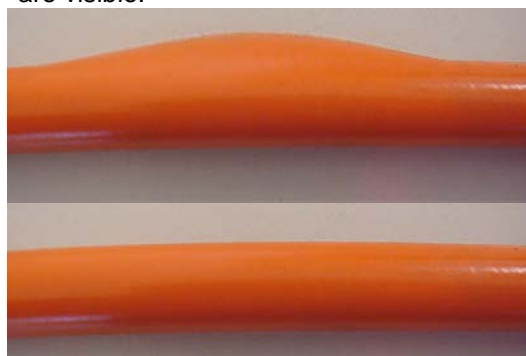

Step 5

- Replace hose, when blisters are visible.

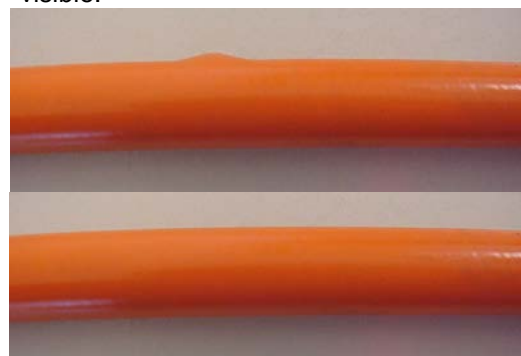

Step 6

- Replace hose, when bubbles or bulges higher than 1mm are visible.

Manufacturing sales & service worldwide
Holmatro Rescue Equipment
 P.O. Box 33, 4940 AA Raamsdonksveer
 The Netherlands
 T + 31 (0)162 - 58 92 00
 F + 31 (0)162 - 52 24 82
 E info@holmatro.com
 www.holmatro.com

Manufacturing sales & service U.S.A., Canada and Latin America
Holmatro, Inc.
 505 McCormick Drive, Glen Burnie, MD
 21061 U.S.A.
 T + 1 - 410 - 768 - 9662
 F + 1 - 410 - 768 - 4878
 E info@holmatro-usa.com
 www.holmatro-usa.com

© Holmatro® 01
 While the greatest care has been devoted to the content, it is possible that the information in this printed matter is incorrect or incomplete. Holmatro N.V. and its affiliated companies (hereafter: Holmatro) cannot be held liable in any way for the consequences of activities undertaken on the basis of this printed matter. If you have any doubts about the correctness or completeness of the information, you shall contact Holmatro (phone number: +31 (0)162-589200).
 Nothing from this printed matter can be copied and/or made public in any way without the explicit authorisation of Holmatro.